


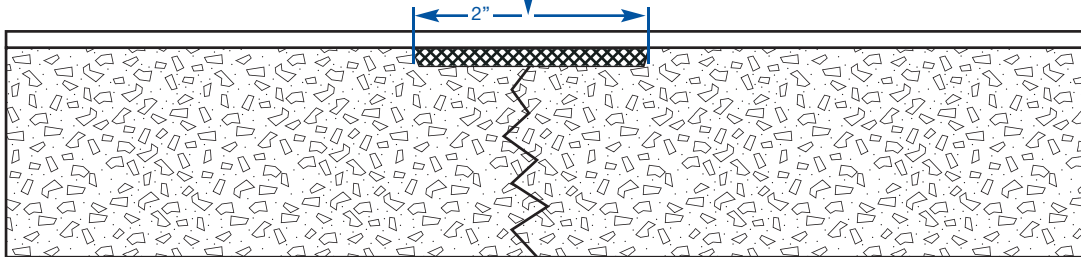

CRACK TREATMENT

Numbering shows order of installation.

- 1) CHASE CRACK USING A "V" SHAPED DIAMOND BLADE
- 2) PATCH WITH POLYMER NATION P-30 OR S-15.
INSTALL FIBERGLASS MESH INTO WET MATERIAL.
- 3) TOP COAT WITH SELECTED POLYMER NATION COATING.



CRACK TREATMENT